



AHT Liftgates, LLC
 309 Mogie Ln.
 Acworth, Ga. 30102
 (770) 425-5480
 E-Mail: parts@ahtliftgates.com
 Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
03 EMPTY PLATFORM WILL NOT RAISE	1) <i>Low hydraulic oil</i>	-Put platform on ground. Check oil level. Add new oil to within 1" from top of tank.
	2) <i>Suction Filter is plugged</i>	2. Check hydraulic system for leaks. **Recommended oil is 22 viscosity** 3. Drain oil from hydraulic tank and check & clean filter