



AHT Liftgates, LLC

309 Mogie Ln.

Acworth, Ga. 30102

(770) 425-5480

E-Mail: parts@ahtliftgates.com

Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
LOADED PLATFORM STOPS WHEN LIFTING BUT THE MOTOR IS STILL RUNNING	<i>1) Load is too heavy or too far out towards end of platform.</i>	- Correct load
	<i>2) Low hydraulic oil</i>	- Put platform on ground. Check oil level. Add new oil to within 1" from top of tank.
	<i>3) Relief valve is set too low</i>	- Reset relief valve in Power Pack to 220 Bar or 3150 PSI. (A calibrated pressure gauge is necessary to properly adjust relief valve)