



AHT Liftgates, LLC
 309 Mogie Ln.
 Acworth, Ga. 30102
 (727) 452-0174
 E-Mail: parts@ahtliftgates.com
 Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
PLATFORM LOWERS SLOW	1) <i>In winter, it is normal</i>	- Can try lower 10 viscosity oil
	2) <i>Flow control valve is closed or adjusted wrong</i>	- Flow control valve is on the block opposite the C30 cartridge valves. Loosen nut and turn valve stem counter clockwise. Retighten nut.
	3) <i>Lift arm pins are seized</i>	- Lubricate all 12 points. Check operator's manual for locations. Most books page 21
PLATFORM RAISES SLOW	1) <i>Low current to motor</i>	- Charge battery and check for poor ground.
	2) <i>Low hydraulic oil</i>	- Put platform on ground. Check oil level. Add new oil to within 1" from top of tank.
	3) <i>Flow control valve is closed or adjusted wrong</i>	- Flow control valve is on the block opposite the C30 cartridge valves. Loosen nut and turn valve stem counter clockwise. Retighten nut.
	4) <i>Suction Filter is plugged</i>	- Drain oil from hydraulic tank and check & clean filter
	5) <i>Lift arm pins are seized</i>	- Lubricate all 12 points. Check operator's manual for locations. Most books page 21