



**AHT Liftgates, LLC**  
 309 Mogie Ln.  
 Acworth, Ga. 30102  
 (727) 452-0174

E-Mail: [parts@ahtliftgates.com](mailto:parts@ahtliftgates.com)  
 Web: [www.ahtliftgates.com](http://www.ahtliftgates.com)

### STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
PLATFORM STOPS WHILE LOWERING	1) <i>Lift arm pins are seized</i>	- Lubricate all 12 points. Check operator's manual for locations. Most books page 21
	2) <i>(One) Lift Cylinder Valve wiring is defective. (Only applies to LA Model gates)</i>	Check wire to solenoid on C10 cartridge valves. (valve is on top of lift cylinder) Check both lift cylinders. One of the wires is broken. Replace solenoid. <b>(Only on LA Models with Electrical Hose Burst Valves)</b>