



AHT Liftgates, LLC
 309 Mogie Ln.
 Acworth, Ga. 30102
 (727) 452-0174

E-Mail: parts@ahtliftgates.com
 Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
04 PLATFORM WILL NOT RAISE OR LOWER - MOTOR NOT RUNNING	1. <i>Truck Battery</i>	Check battery for power
	2. <i>Ground Strap is Loose</i>	Repair/Replace Ground Strop
	3. <i>Main Switch is OFF</i>	Turn Switch On (Red Key)
	4. <i>Blown Fuse in Power Pack</i>	Replace inline fuse on main battery cable wire. 12V = 25 Amp
	5. <i>Master Control Switch is Defective</i>	Put test light on wire to check for current. If no current switch is bad
	6. <i>Check Power to Up Button</i>	If no power- button or remote is bad
	7. <i>No Power</i>	Push UP Button and put test light on hot cable on motor. If power on cable then motor is bad. If no power go to starter solenoid. Check battery side of solenoid. If no power on battery side either ground is bad or low/bad battery. Next push "up" button and put light on hot wire on motor side. If no power then starter solenoid is bad.