



AHT Liftgates, LLC
 309 Mogie Ln.
 Acworth, Ga. 30102
 (727) 452-0174

E-Mail: parts@ahtliftgates.com
 Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
REMOTE CONTROL NOT WORKING - MASTER CONTROLS WORKING	1) <i>Remote control not working</i>	- Replace remote
	2) <i>Spiral cable on remote defective</i>	- Replace with new remote w/spiral cable
	3) <i>Contacts are defective</i>	- Check contact blocks in remote. Replace if defective
REMOTE "DOWN" NOT WORKING. MASTER CONTROLS WORKING	1) <i>Remote control cable is defective</i>	- Repair or replace remote control cable
	2) <i>Down contact is defective</i>	- Repair or replace DOWN contact
REMOTE "UP" NOT WORKING. MASTER CONTROLS WORKING	1) <i>Remote control cable is defective</i>	- Repair or replace remote control cable
	2) <i>Down contact is defective</i>	- Repair or replace UP contact