


CENTER OF GRAVITY AND LOADING DIAGRAM

- 1) Be sure driver and/or operator are well trained in the proper procedure before using the "AHT" tailgate loader. A good training session will save a lot of heartaches later.
- 2) Please be conscious of the total lifting capacity of the "AHT"

Product	Pounds	Kilogram
One person	180	90
Pallet Jack	170	80
Pallet	65	30
Product	???	???

- 3) Total weight should be equal to the Lifting Capacity of the "AHT" or less.
- 4) Please consult the data plate on your "AHT" tailgate loader, to be sure the maximum capacity is not exceeded.

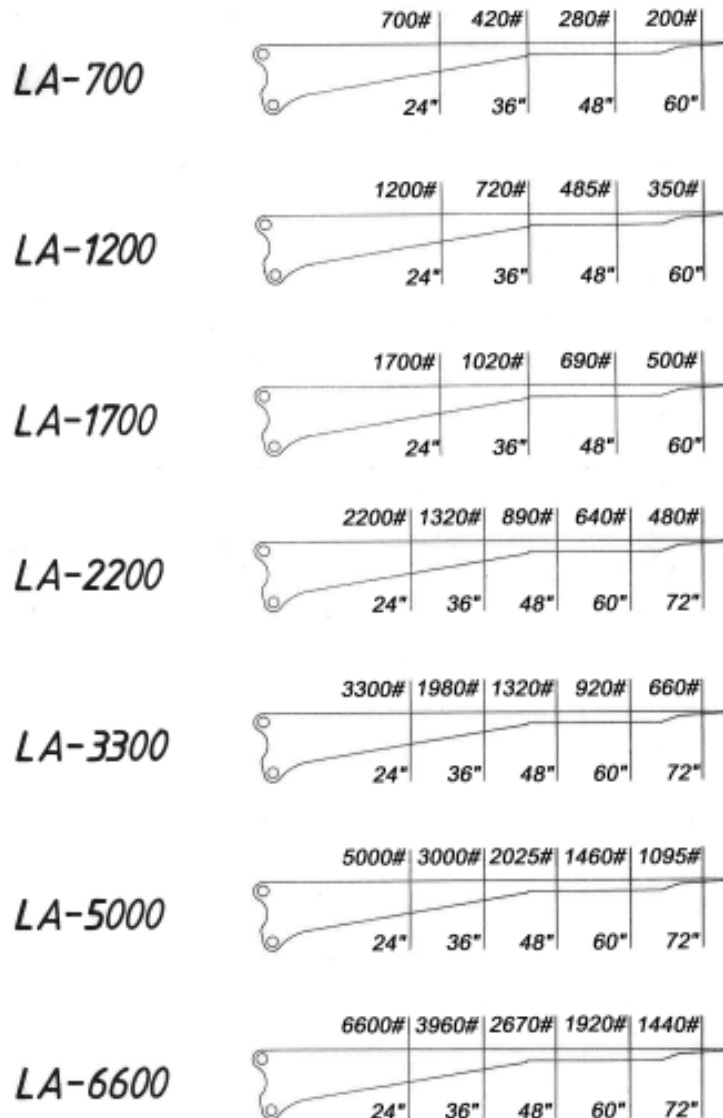

Do not operate the "AHT" until you have read the operator's manual